

Gira QuadClient

The QuadClient is fully integrated. This means that you do not need to install it additionally on the system. The TecTool automatically determines the version of the HomeServer and downloads the appropriate client.

NOTE - This means that multi-system operation, as is possible with the original QuadClient starter, cannot be realized. This fact was not taken into account during development, as it is very rarely required in practice.

To set up, please proceed as follows:

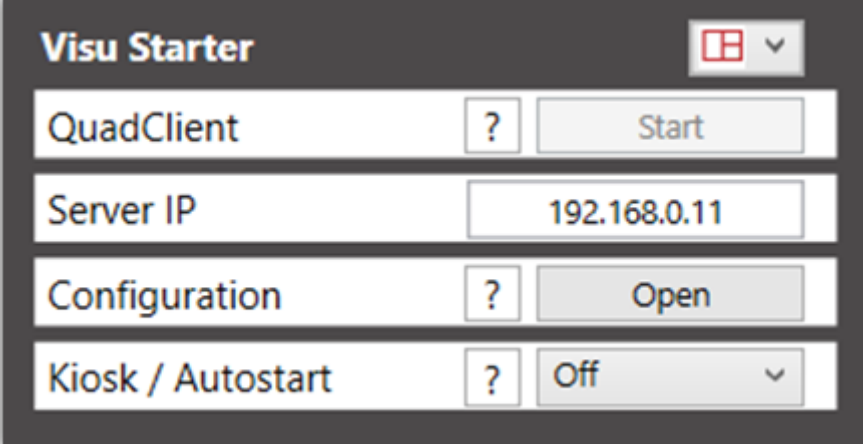
First enter the IP address of the HomeServer.

Then select "Open" configuration.

It may now take a moment for the client software to load.

After completion, the original QC setting opens automatically.

Once the settings have been saved and kiosk mode has been activated, the QuadClient can be started by clicking "Start".

A screenshot of the 'Visu Starter' application window. The window has a dark grey title bar with the text 'Visu Starter' in white and a red square icon with a white 'X' and a dropdown arrow. Below the title bar, there are four rows of configuration options. Each row consists of a label, a question mark icon, and a button. The first row is 'QuadClient' with a 'Start' button. The second row is 'Server IP' with a text field containing '192.168.0.11'. The third row is 'Configuration' with an 'Open' button. The fourth row is 'Kiosk / Autostart' with a dropdown menu showing 'Off' and a dropdown arrow.

Visu Starter		
QuadClient	?	Start
Server IP		192.168.0.11
Configuration	?	Open
Kiosk / Autostart	?	Off

Revision #2

Created 20 January 2025 09:04:39 by Unhye Lee

Updated 20 January 2025 18:34:23 by Benjamin Schneider